


# How to Replace MX4 with MX4-R2

Please observe the wire changes below when exchanging the MX4 with the MX4-R2.


## Wiring Changes

1. Carefully unplug the terminal block connectors from the MX4 board and remove it from the DIN rail. Leave the wires connected to the old terminal plugs for now.
2. Mount the MX4-R2 on the DIN rail.
3. Carefully remove each wire from the MX4 connector and attach them to the MX4-R2 connector matching terminal numbers from the old to the new terminal. The numbers match up to the original MX4 pin function.

**NOTE:** The MX4 terminal blocks are not interchangeable and will not be used with the MX4-R2 board.

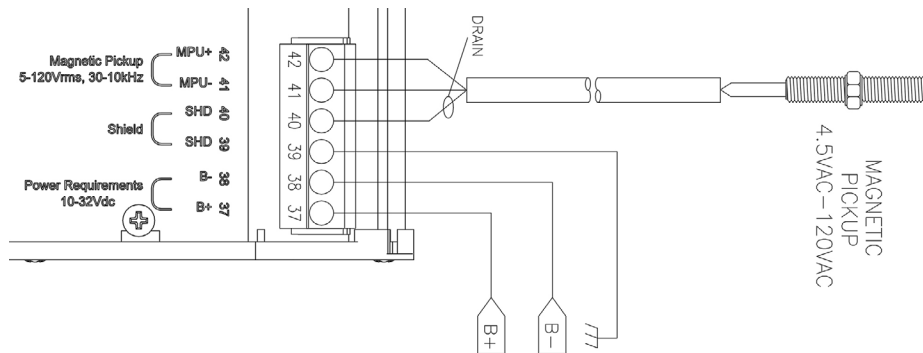


Example of MX4 Power and Magnetic Pickup Wiring

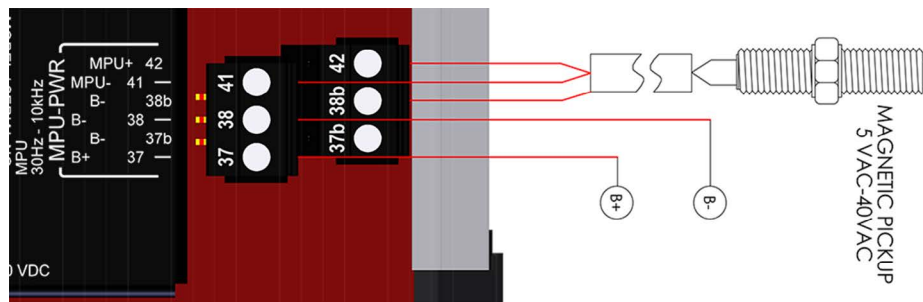

Example of MX4-R2 Power and Magnetic Pickup Wiring


4. Match the LK3 Comm Address jumper positions on MX4 to the Modbus Address position 1 thru 6 on the MX4-R2. If a jumper is installed, position the switch to the Closed position (toward the Modbus Address) text.

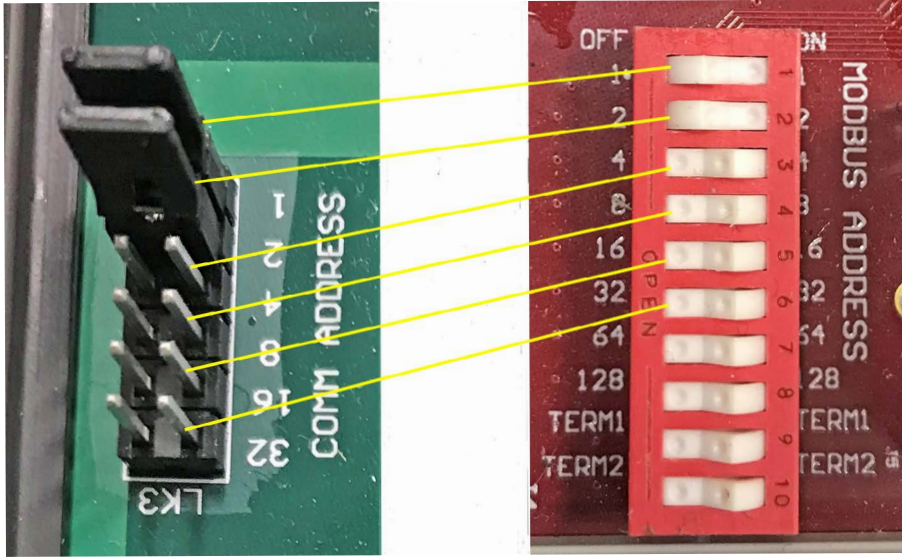

MX4; LK3 is shown with jumpers in position 1 and 2.

MX4-R2; Set position 1 and 2 Closed with rocker down on the right side. Set position 3-6 Open with the rocker down on the left side.

5. The LK1 Term is located near terminal 52 under the cover of MX4. Match its jumper position to the Modbus Address position 9 on the MX4-R2. If jumper was installed in LK1, set position 9 to the Closed position. If its without a jumper, set position 9 to the Open position.

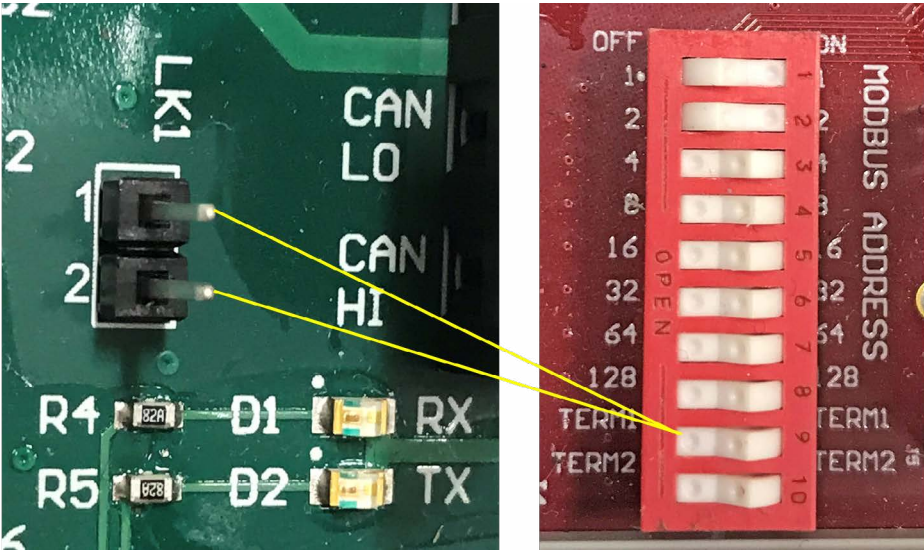

MX4; LK1 TERM shows no jumper is used.

MX4-R2; Set position 9 to Open with rocker down toward left side.

**FW MURPHY PRODUCTION CONTROLS**  
**SALES, SERVICES & ACCOUNTING**  
 4646 S. HARVARD AVE.  
 TULSA, OK 74135

**MANUFACTURING**  
 2151 RANDON DYER ROAD  
 ROSENBERG, TX 77471

5757 FARINON DRIVE  
 SAN ANTONIO, TX 78249

**DOMESTIC SALES & SUPPORT**

FW MURPHY PRODUCTS  
 PHONE: 918 957 1000  
 EMAIL: INFO@FWMURPHY.COM  
 WWW.FWMURPHY.COM

FW MURPHY CONTROL SYSTEMS & SERVICES  
 PHONE: 281 633 4500  
 EMAIL: CSS-SOLUTIONS@FWMURPHY.COM

**INTERNATIONAL SALES & SUPPORT**

**CHINA**  
 PHONE: +86 571 8788 6060  
 EMAIL: INTERNATIONAL@FWMURPHY.COM

**LATIN AMERICA & CARIBBEAN**  
 PHONE: +1 918 770 8775  
 EMAIL: INTERNATIONAL@FWMURPHY.COM

**SOUTH KOREA**  
 PHONE: +82 70 7951 4100  
 EMAIL: INTERNATIONAL@FWMURPHY.COM



FM 668576 (San Antonio, TX - USA)  
 FM 668933 (Rosenberg, TX - USA)



FM 523851 (China) TS 589322 (China)